
SERVICE BULLETIN



04796 Trigger Interlock Assembly for use on

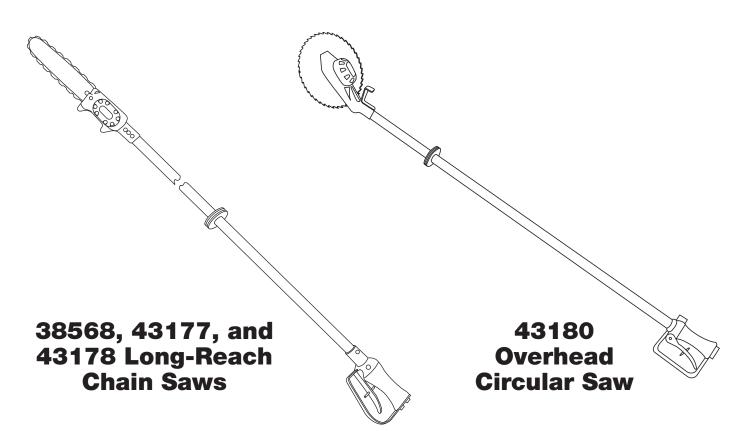



Read and **understand** all of the instructions and safety information in this manual before operating or servicing this tool.



AWARNING



Read and understand all of the instructions and safety information in this bulletin before operating or servicing this tool. Refer also to the instruction manuals for your saw.

Failure to observe this warning could result in severe injury or death.


AWARNING




Wear eye protection when operating or servicing this tool.

Failure to wear eye protection could result in serious eye injury from flying debris or hydraulic oil.

Kit Instructions

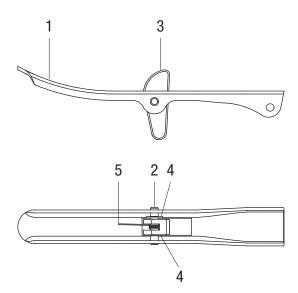

- 1. Position the trigger (1) and safety latch (3) as shown.
- 2. Slide the pin (2) half way through the trigger (1) and safety latch (3).
- 3. Position the torsion spring (5) as shown and slide the pin (2) completely through the trigger (1).
- 4. Assemble two retaining rings (4) onto the pin (2) in the grooves provided.

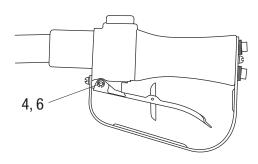

- Remove the retaining ring (4) and trigger pivot pin (6), which secures the trigger interlock assembly.
 Remove and discard the trigger assembly, trigger pivot pin, and retaining rings.
- 6. Assemble the new trigger interlock assembly to the tool in reverse order from step 5 above.

Parts List

	UPC No.			
Key	78-3310-	Part No.	Description Qt	У
1	04797	50047973	Trigger1	1
2	04800	50048007	Pin 1	1
3	04798	50047981	Safety latch1	1
4	42827	50428270	Retaining ring	4
5	04799	50047990	Torsion spring 1	1
6	42547	50425471	Trigger pivot pin1	1



USA 800-435-0786 Fax: 800-451-2632 815-397-7070 Fax: 815-397-1865 Canada 800-435-0786 Fax: 800-524-2853 International +1-815-397-7070 Fax: +1-815-397-9247

4455 Boeing Drive • Rockford, IL 61109-2988 • USA • 815-397-7070 An ISO 9001 Company • Greenlee Tools, Inc.