

910FS Optical Fusion Splicer





910FS Optical Fusion Splicer

- Core alignment, Simple user interface.
- Capable of splicing single fiber 250 and 900u fibers.
- Capable of splicing single mode and multimode fibers in nine seconds.
- 5.7" flip over LCD.
- Up to six languages supported simultaneously.
- Electrodes are user replaceable.
- Loaner units available.




 Removable fiber adapters are used to hold the fiber during cleaving (910CL) and splicing operations.





- Uses splice on connector (SOC).
 - SC and LC
 - APC and PC
- Same adapter for SC and LC.
- SOC are pre-cleaved.

LC/UPC SOC

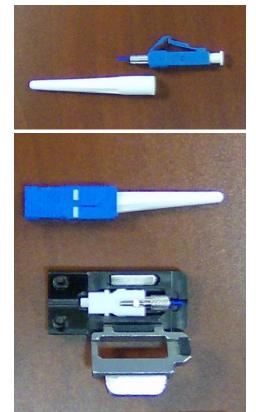


Adapter with SC/UPC SOC installed



Operation

- 1. Select MENU key on keypad.
- 2. Select item #1 using the green arrow key.



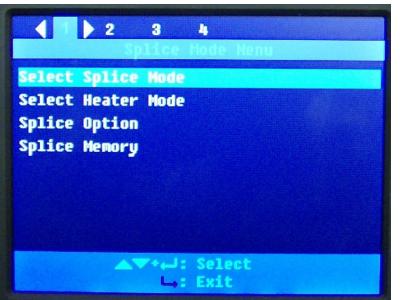



- Select type of splice (Auto, SM, DS or NZ) from splice mode menu.
- 4. Insert the fiber adapters with the cleaved fiber into each chuck (make sure to install a splice protector before cleaving).







- 5. Close dust cover.
- Initiate splice with the SET key.
- Open dust cover when splice is completed.
 - Note: The loss value is only an approximation.





8. When splice is complete carefully remove both fibers from the fiber adapters, center the protective tube over the splice. Use a finger to hold the fiber in each adapter when opening the fiber clamp.





 9. Place the protective splice tube in the heater for shrinking; use the HEAT key to start the heater.
10.Remove splice and set the splice into the cooling tray on the back of the splicer.





Fusion Splicer Kit

- Fusion Splicer
- Extra set of electrodes
- Ruggedized carry case
- RS232 and USB cables
- 120/240VAC charger/power supply
- Tweezers
- Cooling tray



Contractors Kit (910FS-KIT2)

- Cleaver
- Extra Rechargable Battery
- Cleaning Kit
- Fiber Stripper

Contact your local Greenlee location or representative for pricing.





Sales and Technical Support

Greenlee Communications 1390 Aspen Way Vista, CA, 92081 <u>www.greenlee.com</u>

1-800-642-2155

