


SERVICE BULLETIN



GREENLEE[®]
UTILITY
A Textron Company

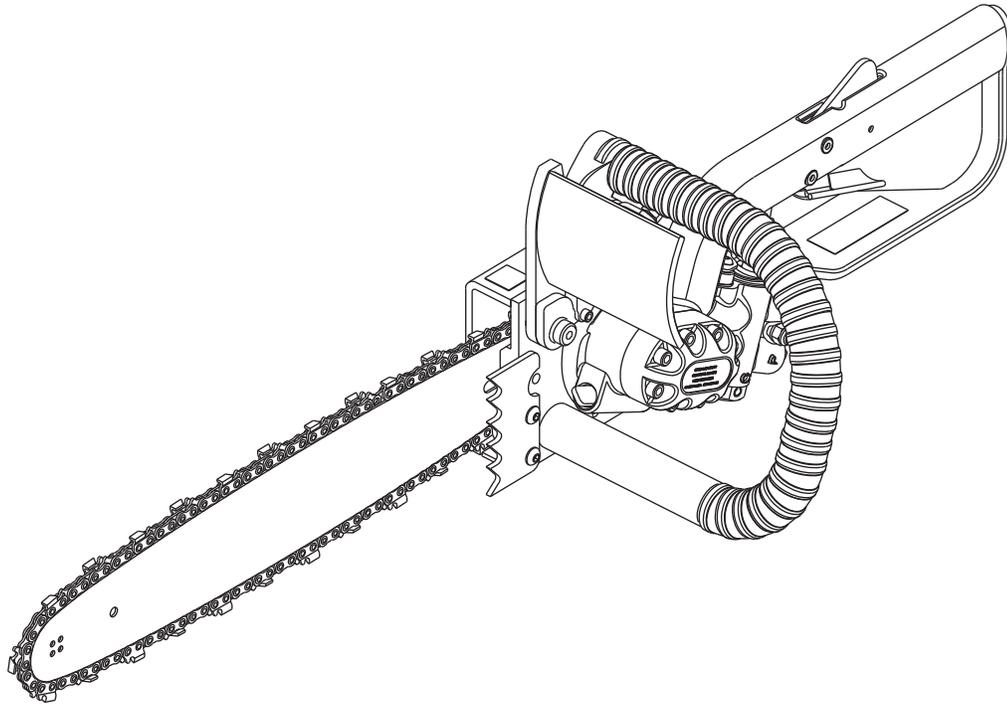


40790 Chain Brake Shroud Replacement for use on HPS513CB and HCS8160CB Chain Saws




Read and understand all of the instructions and safety information in this manual before operating or servicing this tool.


Register this product at www.greenlee.com

Important Safety Information

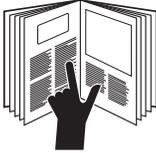	⚠ WARNING
	Read and understand all of the instructions and safety information in this bulletin before operating or servicing this tool. Refer also to the instruction manuals for your saw. Failure to observe this warning could result in severe injury or death.

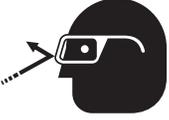	⚠ WARNING
	Wear eye protection when operating or servicing this tool. Failure to wear eye protection could result in serious eye injury from flying debris or hydraulic oil.

Instructions

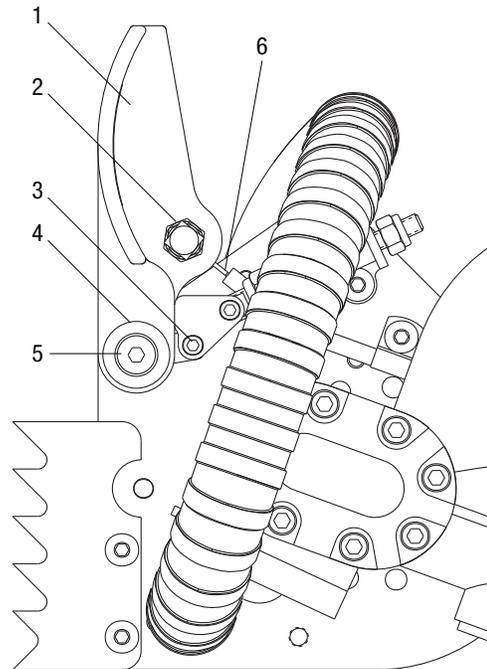

1. Loosen bowden pin (2) to release cable (6).
2. Remove shoulder bolt (5) and washers (4).
3. Remove socket head cap screw (3).
4. Slide cable (6) from bowden pin (2) on shroud (1).
5. Repeat steps in reverse order, replacing shroud (1), shoulder bolt (5), and washers (4) with new configuration (shown below) contained in kit.

