ClearTest® TRANSFORMER TESTER CT-300

WITH AUTOMATIC SELF TEST

Operating & Instruction Manual







SAFETY

WARNING: The ClearTest Transformer Tester shall only be used on equipment known to be deenergized and/or discharged.

CAUTION: Using the ClearTest Transformer Tester on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing.

OPERATIONAL IMPAIRMENT: If the CT-300 is used in a manner not described in this instruction manual, the protection and effective operation of this equipment may be impaired.

MANUFACTURING LOCATION
HD Electric • Southaven, MS, 38672, USA

INTRODUCTION

The CT-300 ClearTest Transformer Tester is a versatile tool for quick and easy checks of transformers and the connections made to them. The transformer connections can include bundled secondaries or a cable run from the transformer to the meter.

In the field, the CT-300 is used to test the primary and secondary sides of new or reworked, deenergized single or three phase transformer installations.

In the shop the tester is used for quick screening of incoming and outgoing transformers (including their internal fuses and breakers). It tests both 1Ø and 3Ø transformers including PT's and other instrument transformers.

HOW IT WORKS

The CT-300 is used in the field for testing connected transformers and their connected primary and secondary leads for both shorts or opens. Unlike a simple ohmmeter, the CT-300 measures transformer winding inductance and can differentiate true shorts from other low resistance windings or connected equipment such as meters.

NOTE: The CT-300 will detect most typical transformer defects including partially shorted windings such as turn-to-turn or layer-to-layer which result in an improper ratio.

BEFORE TESTING:

- 1. DO NOT CONNECT TO ENERGIZED EQUIPMENT
- 2. REMOVE SECONDARY LOAD
- 3. REMOVE ALL PRIMARY UNDERGROUND CABLES
- PRESS AND HOLD TEST BUTTON FOR EACH CONNECTION DO NOT HOLD THE TEST BUTTON FOR MORE THAN ONE CONNECTION

TESTING THE CLEARTEST TRANSFORMER TESTER

The CT-300 will automatically perform a complete self-test of the batteries, lights, beeper and all electronics when you press and hold the TEST button and is indicated by all lights and the beeper turning on. This self-test takes about one second to complete, after which the tester will begin testing whatever the leads are connected to. This self-test checks everything except for the test leads and internal fuse. To test the leads and fuse, short the test leads together and press the TEST button.

A SHORT light after completion of the normal self-test indicates that the leads and fuse are good.

If the unit fails to operate, check or replace both batteries. If this self-test sequence is not completed, the unit will not perform any further testing and must be returned to the factory for service.

USING THE CT-300

For single phase transformers, use these figures as guidelines to get started. For 3Ø transformers, refer to the following page.

When all connections are proper and the transformer itself is good, the CT-300 will beep and show OK. The OPEN indication light indicates a bad connection or an open transformer winding. A SHORT light indicates a short from phase to neutral or phase to phase in the transformer or the connections to it.

NOTE: Disconnect primaries or remove primary fuses before testing secondaries.

RESULTS:

OK: Transformer coil is OK

with no shorts or opens.

SHORT: Transformer has internal

short or load is connected. ac OPEN: Check connections. Transformer


coil is open or check for blown


fuse or breaker.

As a quick test in the shop, the CT-300 can be used to screen transformers by checking both primary and secondary windings and connections. Test for SHORTs on both primary and secondary windings and from primary to secondary. Test for OPENs on both primary and secondary windings to check for open windings or open breakers and fuses.

This instrument is intended for quick and simple testing of transformers and the connections made to them. Do not energize visibly damaged equipment such as a leaking transformer even if the CT-300 indicates OK.


Test Connections for CT-300

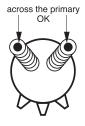

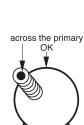






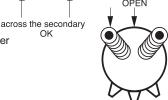



from primaries to secondaries OPEN OK if both primary and secondary have one grounded bushing

Remove secondary ground strap to verify primary isolated from secondary with OPEN indication. For 3Ø transformers, the CT-300 test leads are connected from each phase to neutral and across each pair of phases. When all connections are proper and the transformer itself is good, the CT-300 will beep and show OK. The OPEN indication indicates a bad connection or an open transformer winding. A SHORT indication indicates a short from phase to neutral or phase to phase in the transformer or the connections to it.

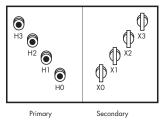


For Y (wye) connections, test the primary and secondary sides of the transformer as follows:

X1 - X2	OK	
X2 - X3	OK	
X1 - X3	OK	
H1 - H2	OK	
H2 - H3	OK	
H1 - H3	OK	
H1 - H0	OK	
H2 - H0	OK	X1
H3 - H0	OK	
H1 - X1 ነ	Transformer OK if both H	Ю
H2 - X2 }	and X0 are grounded,	
H3 - X3 🕽	otherwise OPEN	
H0 - X0	SHORT, if both sides are	
	grounded, otherwise OPI	EΝ

Y Connection

For Δ (delta) connections, test the primary and secondary sides the same as the Y (wye) except omit the connections to X0 and H0.

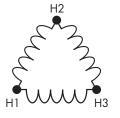

Delta Connection

TESTING DISTRIBUTION VOLTAGE REGULATORS

For typical distribution voltage regulators, test using these figures as guidelines. Both the line and load bushings tested to ground should indicate the reading shown in the figures. With the regulator in the neutral position, the line and load are internally connected with the resulting test indicating SHORT.

TESTING DISTRIBUTION TRANSFORMERS FROM METER SOCKETS

An overhead or underground distribution transformer can sometimes be more conveniently tested from a meter socket served by that transformer.

The CT-300 shall only be used on equipment known to be deenergized. Test both the load and source sides of the meter socket for the presence of voltage before using the CT-300.

Using the CT-300 on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing. The CT-300 will test the secondary side of a transformer connected to the meter socket. Connect the CT-300 across the two source side receptacles and from each receptacle to ground and test.

NOTE: This procedure will not work if other loads are connected to the same transformer.

The wiring on the load side of the meter socket going into the main breaker can also be tested for shorts or crossed phases. Connect the CT-300 across the two load side receptacles and from each receptacle to ground. The absence of shorts or crossed phases will be indicated by an OPEN reading. If the main breaker is not open, connected loads within the building may cause a SHORT or OK indication.

The meter socket connections shown are typical. Local standards may specify different connections.



line to ground

Οĸ

line to load

regulator at neutral

SHORT

load to ground

BATTERY REPLACEMENT

The CT-300 is powered by two 9V lithium or alkaline batteries. They are easily and quickly replaced by removing the battery cover on the back of the unit. Always replace the two batteries together.

NOTE: For user safety there is a non-replaceable 600V internal fuse inside the instrument. If the instrument is connected to an energized transformer, the fuse will blow. The instrument must then be returned to the factory for repair.

DIMENSIONS

4.0 in. W x 7.8 in. L x 2.3 in. H (10.1 cm x 19.5 cm x 5.9 cm)

WEIGHT

1.6 lbs, (727 g)

BATTERY

9V alkaline 1604A, IEC 6LR61 or 9V lithium, ANSI-1604LC

SHORT: Power factor < 0.3 to 0.5, current dependent

OPEN: Current < 10 μA

TRANSFORMER OK: Power factor ≥ 0.3 TO 0.5, current dependent

ENVIRONMENTAL CONDITIONS

CONDITIONS: Indoor and outdoor use ALTITUDE: Up to 6,566 ft. (2000M)

OPERATING TEMPERATURE: -20°F to +140°F (-29°C to +60°C)

HUMIDITY: 95% to +60°C (non-condensing)

POLLUTION DEGREE: PD2

ENCLOSURE MATERIAL: ABS UL 94-HB PRINTED CIRCUIT BOARDS: FR-4 UL 94-V0

REPAIRS

If any damage is found please contact us at 800-435-0786 to arrange for service.

ClearTest Transformer Tester CT-300

WARNING: Use Only on Equipment Known to be Deenergized andor Discharged. To test leads and internal fuse, short leads together and check for blinking SHORT light. Connect the test leads to the device under test. Push the test button and observe the device under test. Push the test button and observe the device under test. Push the test button and observe the opens. OPEN indicates an open connection or a high resistance leakage path. SHORT indicates a very low resistance. Using this tool on the secondary side of transformers may generate high voltages on the primary side. Refer to instructions. Check the primary side. Refer to instructions. Check the sladine or lithium types only. This unit contains a 600V sladine or lithium types only. This unit contains a 600V true which is not replaceable. Refuter to factory for service.

DANGER: Failure to follow these directions or the instructions may expose the user to high voltage, severe injury or death.

HD Electric Company, Waukegan, IL U.S.A. www.HDElectricCompany.com





TERMS AND CONDITIONS OF SALE

HD Electic Company is been inferred to either an THEC or "Seller" and the customer openion or entity purchasing goods or services) thereinflare collectively referred to an 'Cood's) is referred to as 'Re-Suyer'. These Terms and Conditions, any price lest or steches, questions, acknowledgement or invoice been ITLE released to the Goods and all documents incorporated by species to exclude the complete and exclusive statement of the terms of the agreement poverning the safe of Coods by HDE to Buyer. Buyer's acceptance of the Coods will wanted tally yet's assent to these terms and conditions without variation or addition. Any different or additional terms in Buyer's partness order or of the Buyer's acceptance of the Coods will wanted tally yet's assent to these terms and conditions without variation or addition.

1. PRICES AND TAXES: Unless a fixed price is quoted, the price at which this order is accepted is subject to adjustment to HDE's price in effect at the time of order. Any current or future tax or governmental change (or increase in same) affecting Seler's coasts or production, asked or delivery or which Seler's ordering coast pay or collect in connection with the sale, purchase, delivery, storage, processing, use or consumption of Goods (but excluding any wint on Seler's net increase or postfl) what lies for they'ver secount and what he added to the price or postfl what lies for they'ver secount and what he added to the price.

2. TERMS OF PAYMENT. Term are stated on HDE's invoice in U.S. narrow), HDE shall have the rigit, among other remodes, either to be leminate this agreement or to suspend further performance under this action of the generate with the legisle range of the performance in the result of the performance in the performance

3. SHIPMENT AND DELIVERY: Ubles otherwise expressly provided, drighments are made F.O.B. HUEs a shipping post. Risk of loss or durage and responsibility last som that DELIVERY by common canter. Any claims for shridges per administration by the Bug of restabling the state of shipping post. Risk of loss or durage stateder in Instance here expressly of logar and shall be administed by the Bug of restabling the state of shipping post. Risk of loss or durage stateder in Instance and the state of shipping and the shipping state of loss of the state of

4. NOE LIMITED WARRANTY: FICE covers its products with a manufacturer's warranty against defects in melatiest or workmanking for a period of leny year in the case of Capacitor Controls and in all other circumstances for a period of the part of the case of Capacitor Controls and in all other circumstances for a period of the part of the Capacitor Controls and in all other circumstances for a period of the Cara year. Find the capacitor of the cap

5. LIMITATION OF REMEDY AND LIABILITY. THE SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY WARRANTY HEREWOODER SHALL BE LIMITED TO REPAIR, CORRECTION, REPLACEMENT OR CEREBRY LINES IN LINES IN LIBITATION AND INDIVIDENT CONTROL AND IND

8. EXCUSE OF PERFORMANCE (PROCE MALPURE) HIS data not be label for delay in performance due to acts of Coct, and off layer war fer foot wealther, subdauge, stillers, labor displayer, and contributed to the contributed of t

7. CHANGES: HDE reserves the right to change designs and specifications for standard Goods without prior notice to Buyer, but not with respect to custom Goods being made for Buyer. HDE shall have no obligation to install or make such change in any Condent smallerfuler of nor in the ride of such change.

8. ASSIGNMENT: Buyer shall not assign its rights or delegate its dulies hereunder or any interest herein without the prior written consent of HDE, and any such assignment, without such consent, shall be void.

9. INSTALLATION: Buyer shall be responsible for receiving, inspecting, testing, storing, installing, starting up and maintaining all Goods.

10. INSPECTION/TESTING: Buyer, at its expense, agrees that it will promptly inspect the Goods upon recipit thereof, and in no event later than thirty (30) days from the date of recipit of the Goods. Buyer shall deliver to HCD within filters (15) days of inspection, but in no event later than thirty we (50) days from the date of recipit of the Goods, written notice of any and all deficiencies, defects, variations from specifications or complaints or any intelled in the part of the partity, quality, or ordinary than the present of the Goods or reviewed by DBJer. In the event on such written notice is reviewed by HCB. Buyer and the demend conclusively be have inspected and accepted all such Goods unconditionally and to have waived any and all injust and claims, including without limitation any right to expect the Goods or to claim damages in respect themsof, and the partity of the receiver the conditions of the condition of the receiver the developed of the receiver the condition of the receiver the receiver the condition of the receiver the receiver the receiver the condition of the receiver the r

a return is authorized by HDE, a restocking for any Goods requiring repackaging or maintenance a twenty percent (20%) restocking fee shall be assessed to Buyer in the final credit amount.

11. SERVICES: If this agreement requires HDE to perform or provide any services, HDE (including without limitation its successors, assigns, agents or any person or entity acting at HDE's direction) shall not be responsible for any orderest, and any order any order and any order any order and any order and any order any order and any order any order and any order and any order and any order and any order any order and any order any order and any order and any order any order and any order any order any order and any order any order and any order any order any order any order and any order and any order and any order any order and any order and any order any order and any order any order and any order and any order any order and any order any order and any order and any order any order and any orde

12. U.S. EXPORT CONTROL LAWS: All Goods sold to Buyer by HDE hereunder are subject to U.S. Export Control Laws. Buyer hereby agrees not to re-sell or divert any goods contrary to such laws

13. COMPLIANCE: Select.Contractor thall comply with all applicable federal data or local tase, rules, regulations, or orders. Select.Contractor shall comply with all applicable federal data or local tase, rules, regulations, or orders. Select.Contractor shall comply with a Spit Contractor Select. Sele

14. MISCELLAKEOUS: These terms and conditions supersisted all other communications, negotiations and prior or of or written statements regarding the subject matter hereof. No change, modification, resistance, discharge, and advantage of trade, counted or fleshing or pretermance, understanding or agreement purporting to modify, vay, expain, or supplement these terms and conditions that be binding usines hereafter made in written and supplement to preformance, understanding or agreement purporting to modify, vay, expain, or supplement these terms and conditions that be binding usines hereafter made in written and supplement to the pre
termance, understanding or agreement purporting to modify, vay, expain, or supplement these terms and conditions that the similar or supplement to the pre
termance of the supplement to advantage or supplement to pre
termance or addational terms are conditional terms are conditional terms and conditional terms are conditional terms are conditional terms and conditional terms are conditional terms and the conditional terms and the conditional terms are conditional terms and the conditional terms and the conditional terms are conditional terms are conditional terms and the conditional terms are conditional terms and the conditional terms are conditional terms and the conditional terms are conditional terms.

15. DISPUTE RESOLUTION: In the went of any dispute NCLIDING, BUT NOT LIMITED TO. BERGACH OF CONTRACT, BREACH OF WARRANTY, CALANS BEED IN TORT, NEGLEGIBLE, PRODUCT LIMBILITY, REPORT AND THE THE PROPER PRODUCT OF THIS LIMITED WARRANTY, AND THE WARRE OF CLASS ACTION TIRES Use believes Buyer and Select, either may choose to resolve the dispute by binding subtation, as described below, instead of in out. THIS LIMENS IF EITHER BUYER OR SELLER CHOOSE BROWNE ARBITRATION, NETHER PARTY, MINISTER AND THE PROPERTY OF THE PROPERTY OF

16. CLASS ACTION WAVER: BIXING ARBITRATION MUST BE ON AN INDIVIDUAL BASIS. THIS MEANS INTIMER BILVER NOR SELER MAY JOIN CONSCILIANT CLAMBS IN ARBITRATION BY ORAL AGAINST OTHERS, OR LITICATE IN COURT OF ARBITRATION FOR LAMBS AS A REPRESENTATIVE OR MEMBERS OF A CLASS OR IN A PROVINCE ATTORNEY CRESHED, ACAPCITY, ADMINISTRATION OF AR-BITRATION. The birding subtration must be administered by the American Administration Association (TAAA') is accordance with its Commercial Administration Reliase sandor Supplementary Procedures for Commune Reliable Deposite (including proceedings to Intigate ones of stream, filts before a particular or an extra control of the American Administration (Fig. 10) and Confidence of the American Administration (Fig. 10) and Commercial Administration (Fig. 10) and Confidence of the American Administration (Fig. 10) and Confidence of the Administration (Fig. 10) and Confidence of the American Administration (Fig. 10) and Confidence of the American

HD Electric Company is committed to ongoing review and improvement of its product lines, and thus reserves the right to modify product design and specifications without notice.

HD Electric Company® products are available through HDE® sales representatives worldwide.

HD Electric products receive final assembly and shipment from HDE's production facility at

Suite 400 - 4320 Executive Drive, Southaven, MS 38672.

HD Electric Company is ISO 9001:2015 certified