


INSTRUCTION MANUAL



RK6040

60-ton, Single-acting, Die-type Crimping Tool

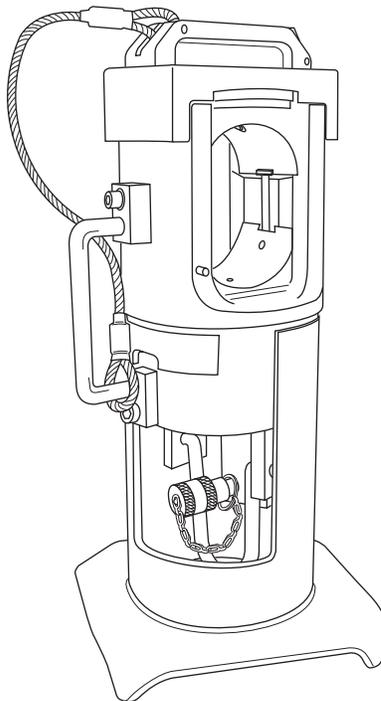

Read and understand all of the instructions and safety information in this manual before operating or servicing this tool.

Register this product at www.greenlee.com

Table of Contents

Description	2
Safety	2
Purpose of this Manual	2
Important Safety Information	3-4
Identification	5
Specifications	5
Setup	6
Operation	7
Maintenance	7
Periodic Relief Valve Check	7
Illustration and Parts List	8-9

Description

The Greenlee 60-ton, Single-acting, Die-type Crimping Tool is intended to crimp sleeves and lugs using industry standard dies. The single-acting ram requires hydraulic pressure to advance, and uses an internal spring to return.

This crimping tool requires an external 700 bar (10,000 psi) hydraulic power source, such as Greenlee 975, 976-22, 980 and 980-22. It may also be powered using a hydraulic intensifier capable of developing 700 bar (10,000 psi), such as the Greenlee Dynapress®.

Optional accessories include the following hydraulic hoses with one male and one female coupler:

- 50058509 3 m (10') Conductive
- 50058517 3 m (10') Non-Conductive
- 50058522 7.6 m (25') Non-Conductive

Safety

Safety is essential in the use and maintenance of Greenlee tools and equipment. This manual and any markings on the tool provide information for avoiding hazards and unsafe practices related to the use of this tool. Observe all of the safety information provided.

Purpose of this Manual

This instruction manual is intended to familiarize operators and maintenance personnel with the safe operation and maintenance procedures for the Greenlee 60-ton, Single-acting, Die-type Crimping Tool. This manual should be kept available to all operating and maintenance personnel.

Keep this manual available to all personnel.

Replacement manuals are available upon request at no charge at www.greenlee.com.

All specifications are nominal and may change as design improvements occur. Greenlee Tools, Inc. shall not be liable for damages resulting from misapplication or misuse of its products. Dynapress is a registered trademark of Greenlee Tools, Inc.

KEEP THIS MANUAL

IMPORTANT SAFETY INFORMATION**SAFETY
ALERT
SYMBOL**

This symbol is used to call your attention to hazards or unsafe practices which could result in an injury or property damage. The signal word, defined below, indicates the severity of the hazard. The message after the signal word provides information for preventing or avoiding the hazard.

⚠ DANGER

Immediate hazards which, if not avoided, **WILL** result in severe injury or death.

⚠ WARNING

Hazards which, if not avoided, **COULD** result in severe injury or death.

⚠ CAUTION

Hazards or unsafe practices which, if not avoided, **MAY** result in injury or property damage.

**⚠ DANGER**

Read and understand all of the instructions and safety information in this manual before operating or servicing this tool.

Failure to observe this warning will result in severe injury or death.

⚠ DANGER


Do not use this crimping tool with any hydraulic hoses or other hydraulic components rated at less than 700 bar (10,000 psi).

Failure to observe this warning will result in severe injury or death.

IMPORTANT SAFETY INFORMATION

	⚠ WARNING
<p>Electrical shock hazard:</p> <p>This tool is not insulated. When using this unit near energized electrical lines, use only certified non-conductive hoses and proper personal protective equipment.</p> <p>Failure to observe this warning could result in severe injury or death.</p>	

	⚠ WARNING
<p>Skin injection hazard:</p> <ul style="list-style-type: none"> • Do not use hands to check for leaks. • Depressurize the hydraulic system before servicing. <p>Oil under pressure easily punctures skin causing serious injury, gangrene or death. If you are injured by escaping oil, seek medical attention immediately.</p>	

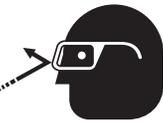	⚠ WARNING
<p>Wear eye protection when using this tool.</p> <p>Failure to wear eye protection could result in serious eye injury from flying debris or hydraulic oil.</p>	

	⚠ WARNING
<p>Pinch points:</p> <p>Keep hands away from closing dies.</p> <p>Failure to observe this warning could result in severe injury or death.</p>	

⚠ WARNING
<p>Use proper die, connector, and wire combinations.</p> <p>Mismatched components can result in an incomplete crimp. Failure to complete a crimp could result in severe injury, death, or fire if a connection separates or if it has high electrical resistance.</p>


⚠ WARNING
<p>Inspect tool and dies before use. Replace any worn or damaged parts. A damaged or improperly assembled tool can break and strike nearby personnel with sufficient force to cause severe injury or death.</p>

⚠ CAUTION
<ul style="list-style-type: none"> • Do not operate crimping tool without dies in place. Damage to the ram or crimping tool head may result. • Do not perform any service or maintenance other than as described in this manual. Injury or damage to the tool may result.

IMPORTANT
<p>Follow the operating instructions and safety information supplied with the hydraulic power source.</p>

Note: Keep all decals clean and legible, and replace when necessary.

Identification

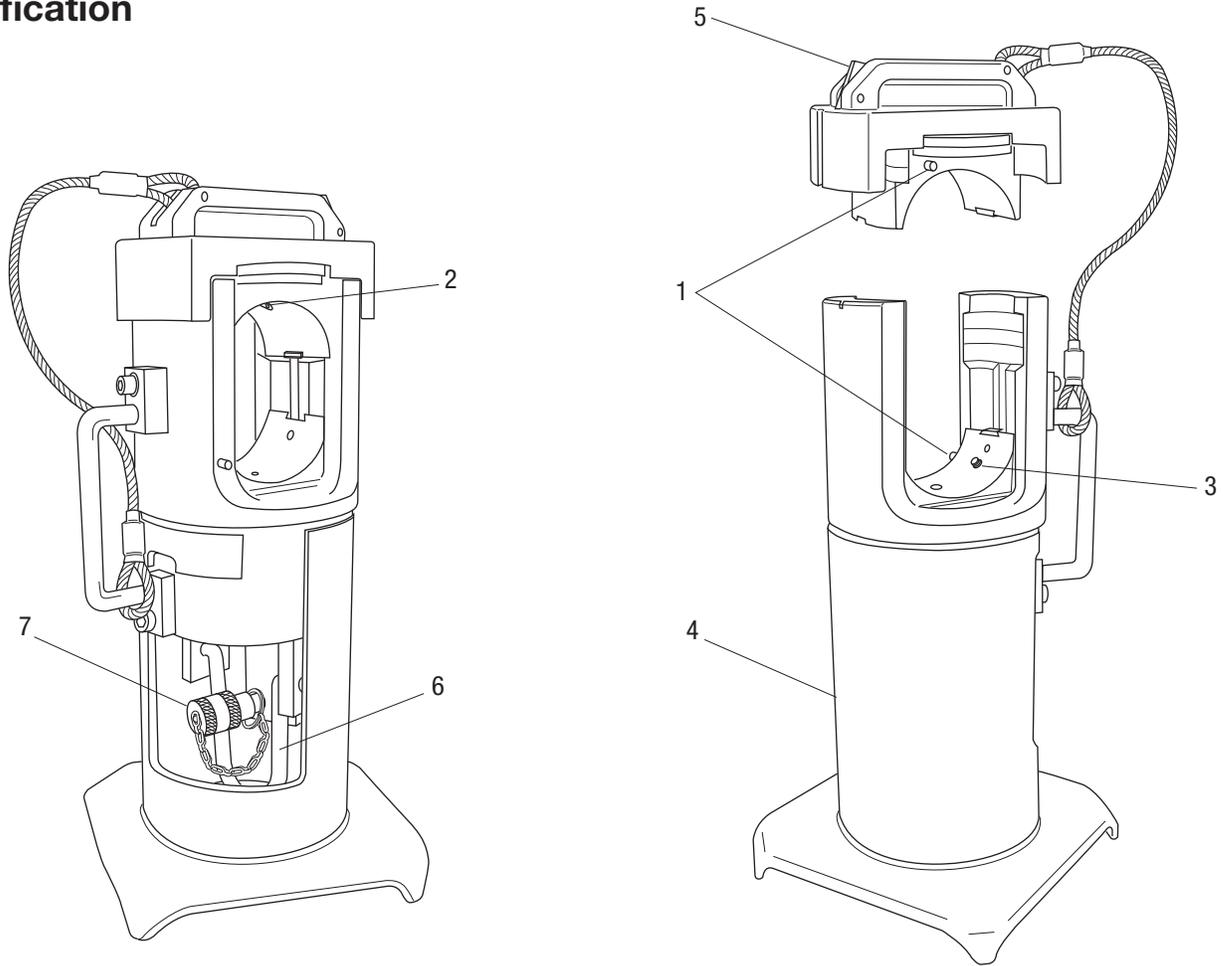

RK6040

- | | |
|---------------------------|---|
| 1. Die Release Buttons | 5. Cap Release Lever |
| 2. Head Die Retaining Pin | 6. Lifting Eye |
| 3. Ram Die Retaining Pin | 7. Hydraulic Coupling
(3/8 threaded, female) |
| 4. Stand | |

Specifications

Weight.....	20.2 kg (45 lb)
Width	152.5 mm (6")
Height	431.8 mm (17")
Stroke (with dies).....	37.8 mm (1.5")
Die Type.....	Burndy "L" type and Alcoa 6000 series
Crimp Force.....	530 kN (60 tons)
Power Source Required	700 bar (10,000 psi)
Oil Capacity Required.....	312 cc (0.75 pint)

Setup

⚠ DANGER

Do not use this crimping tool with any hydraulic hoses or other hydraulic components rated at less than 700 bar (10,000 psi).

Failure to observe this warning will result in severe injury or death.

⚠ CAUTION

Do not operate crimping tool without dies in place. Damage to the ram or crimping tool head may result.

IMPORTANT

Follow the operating instructions and safety information supplied with the hydraulic power source.

⚠ WARNING




Skin injection hazard:

- Do not use hands to check for leaks.
- Depressurize the hydraulic system before servicing.

Oil under pressure easily punctures skin causing serious injury, gangrene or death. If you are injured by escaping oil, seek medical attention immediately.

⚠ WARNING

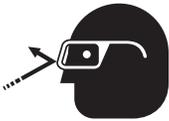

Wear eye protection when using this tool.

Failure to wear eye protection could result in serious eye injury from flying debris or hydraulic oil.

⚠ WARNING

Use proper die, connector, and wire combinations. Mismatched components can result in an incomplete crimp. Failure to complete a crimp could result in severe injury, death, or fire if a connection separates or if it has high electrical resistance.

⚠ WARNING

Inspect tool and dies before use. Replace any worn or damaged parts. A damaged or improperly assembled tool can break and strike nearby personnel with sufficient force to cause severe injury or death.

1. Select the die set that corresponds to the size, type, and manufacturer of connector to be crimped.
2. Press the release button on the ram and slide one of the die halves into the jaw. Release the button and slide the die half until the retainer snaps and locks the die into place.
Press the die release button on the cap and slide the other die half in. Release the button and slide the die until the retainer snaps and locks into place.
3. Connect the hydraulic hose from the power source to the tool.
4. In cold weather, allow the power source to run (idle) for a few minutes to warm the hydraulic fluid. Actuating the tool intermittently will reduce the time required to warm the fluid to an efficient operating temperature.

Operation

	⚠ WARNING
	<p>Electrical shock hazard:</p> <p>This tool is not insulated. When using this unit near energized electrical lines, use only certified non-conductive hoses and proper personal protective equipment.</p> <p>Failure to observe this warning could result in severe injury or death.</p>

	⚠ WARNING
	<p>Pinch points:</p> <p>Keep hands away from closing dies.</p> <p>Failure to observe this warning could result in severe injury or death.</p>

Note: Consult the connector manufacturer's instructions for the proper crimping procedure and proper die(s), etc.

1. Prepare the cable by stripping off the appropriate amount of insulation.
2. Select a connector that corresponds to the conductor and the application.
3. Insert the conductor into the connector. Position the connector between the crimping dies.
4. Activate the hydraulic power source until the ram has advanced and the crimp is completed.

Note: To assure a complete crimp, verify that the power source has reached 700 bar (10,000 psi). Refer to "Periodic Relief Valve Check" in this manual.

5. Stop the power source and allow the ram to retract.

Maintenance

- Keep the tool clean. Use the tool with care to keep dirt and grit out of the hydraulic system. Contamination is the most common cause of failure for hydraulic tools.
- Store the tool in its original case with the ram fully retracted.
- Occasionally lubricate the die release button assemblies. A molybdenum disulfide grease is recommended.
- Inspect the hydraulic hoses periodically.
- Periodically verify that the power source reaches 700 bar (10,000 psi). Refer to "Periodic Relief Valve Check" in this manual.

Periodic Relief Valve Check

Periodically verify that your hydraulic power source is supplying between 9600 psi and 10,400 psi (662 bar and 717 bar).

Use a test-quality pressure gauge on the supply line from the hydraulic power source.



1. Refer to the instructions supplied with the pressure gauge.
2. Stop the flow of hydraulic oil from the power source.
3. Connect the pressure gauge to the supply line of the power source.
4. Install the set of test dies into the crimping tool.
5. Activate the power source until the ram has advanced and the power source reaches relief pressure. The pressure gauge should read between 9600 psi and 10,400 psi (662 bar and 717 bar) .
6. Release the pressure by stopping flow from your power source. The ram will retract.

If crimp pressures are low, the hydraulic power source relief valve may need adjustment.

IMPORTANT

Relief valve adjustments must be performed according to the instructions provided with the hydraulic power source.

Illustration

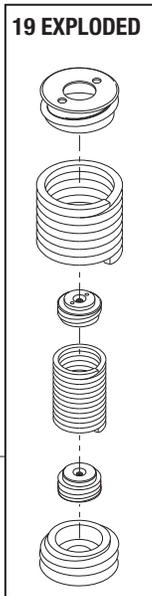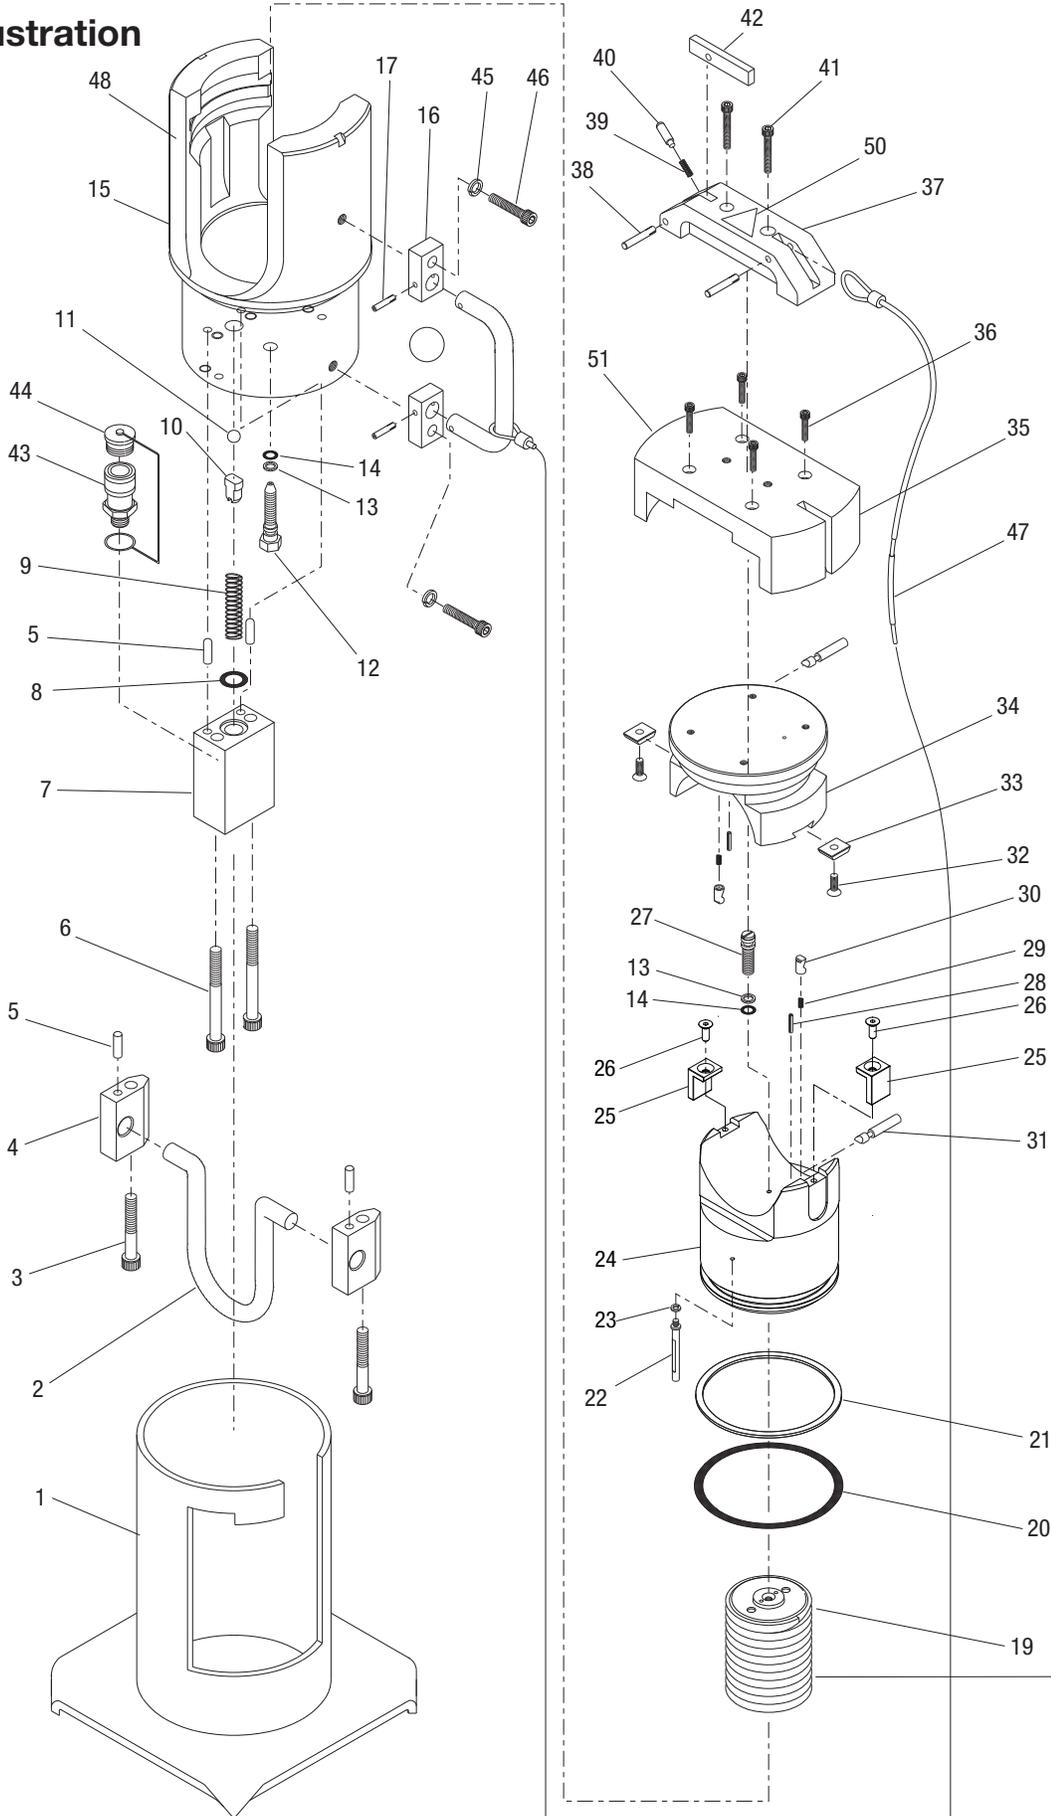

Parts List

Key	Part No.	Description	Qty	Key	Part No.	Description	Qty
1	50105663	Stand	1	28†		Pin.....	2
2	50105671	Lifting ring	1	29†		Spring	2
3	50105680	Screw	2	30†		Pin, die	2
4	50105698	Block, hook guide	2	31†		Pin, retainer.....	2
5	50105701	Pin.....	4	32†		Screw	2
6	50105710	Screw	2	33†		Retainer.....	2
7	50105728	Block, oil feed	1	34	50106023	Retainer, holder.....	1
8*		O-ring.....	1	35<		Cap	1
9	50105744	Spring	1	36<		Screw	4
10	50105760	Holder, ball.....	1	37<		Handle, head cap.....	1
11*		Ball.....	1	38<		Pin.....	2
12	50105787	Screw, anchor spring	1	39<		Spring	1
13*		Backup ring.....	2	40<		Pin.....	1
14*		O-ring.....	2	41<		Screw	2
15	50105817	Head, cylinder.....	1	42<		Switch, release.....	1
16>		Block, handle holder	2	43	90508076	Coupler, threaded female, 3/8" (includes item 44).....	1
17>		Pin.....	2	44	90501098	Cap, coupler with lanyard.....	1
18>		Handle.....	1	45>		Washer	2
19	50105876	Driver, center spring.....	1	46>		Screw	2
20*		O-ring.....	1	47<		Wire, connect.....	1
21*		Backup ring.....	1	48	50106171	Decal, identification	2
22	50105906	Screw	1	49	50106180	Box, metal	1
23	50105914	Washer.....	1	50<		Decal, pinch hazard	1
24	50105922	Ram.....	1	51<		Decal, warning	1
25†		Guide, ram	2				
26†		Pin.....	2				
27	50105957	Screw, anchor spring	1				
				Kits			
				*	50017438	Seal kit (includes items marked with an asterisk)	
				†	52033900	Die retaining kit (includes items marked with †)	
				>	52054978	Handle assembly kit	
				<	52054976	Cap hardware kit	



4455 Boeing Drive • Rockford, IL 61109-2988 • USA • 815-397-7070
An ISO 9001 Company • ©2019 Greenlee Tools, Inc.

USA

Tel: 800-435-0786

Fax: 800-451-2632

Canada

Tel: 800-435-0786

Fax: 800-524-2853

International

Tel: +1-815-397-7070

Fax: +1-815-397-9247

www.greenlee.com